



Packaging contains:

- 1) 6-ft of 2-inch Harness webbing, with stainless-steel grommet
- 2) 2 tubular sleeves (4" each)
- 3) 2 tubular sleeves (5" each)
- 4) 1 Right waist-strap assembly (3.5-ft 2-inch webbing with one D-ring)
- 5) 1 Left waist-strap assembly (3.5-ft 2-inch webbing with one D-ring and quick-release buckle)
- 6) 5 Stainless steel belt-slides
- 7) 2 Stainless steel D-rings
- 8) 1 Stainless steel bent D-ring
- 9) 1 Stainless steel waist strap release belt buckle
- 10) Left and right chest strap Assembly

Deluxe Quick Release Harness
Item # BC1080Q

This harness utilizes nylon webbing for strength and comfort. It also features tubular webbing sleeves to minimize wear wherever the harness would normally be in contact with a metal backplate.

The Dive Rite Deluxe Harness fits on all Dive Rite back-plates.

Great for technical diving
with a backplate.



Swivel points on the shoulder-straps and a chest strap ensure a comfortable fit.

The quick-release buckle allows for easy don/doff of the harness.

**** Crotch Strap not included ****

www.DiveRite.com

Threading Deluxe Harness with Quick-Release

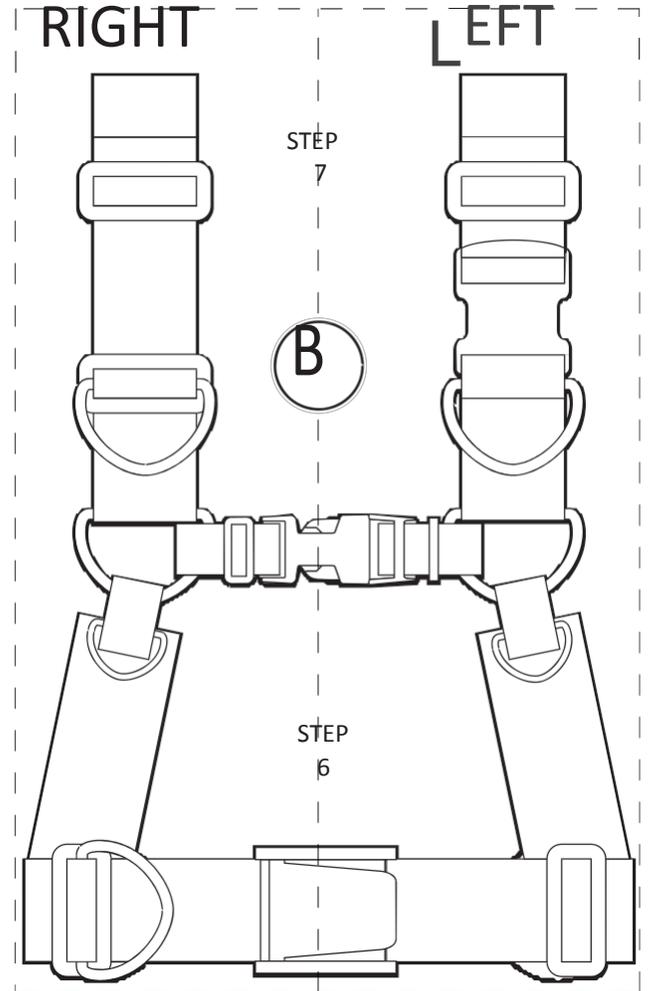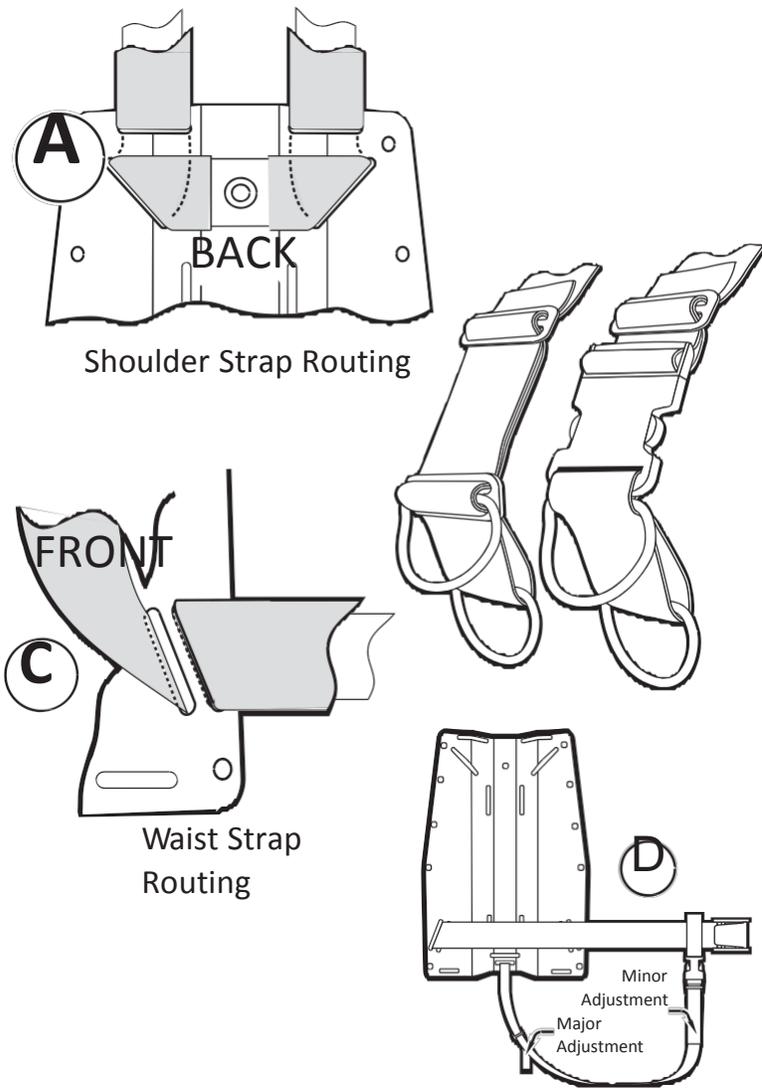

- 1) Begin by threading 2 tubular sleeves onto the 6-foot piece of harness webbing. These will end up where the harness goes through the upper harness strap slots, as shown in figure A.
- 2) Thread the 6-foot webbing piece through the upper shoulder strap slots, as shown in Figure A, positioning the webbing so the grommet is over the upper tank bolt-hole.
- 3) Thread the remaining 2 tubular sleeves onto the 3-foot sections of the webbing, with them ending up where the two sections go through the waist slots, as shown in figure C.
- 4) Using the right waist strap assembly (without the quick-release buckle), weave the tail end through the two left (looking at the front of the back plate) waist slots - starting from the front, then through the inner slot, and back out through the outer slot again.
- 5) Repeat step 4 with the left waist-strap assembly (with the quick-release buckle).
- 6) Using Figure B, install one 2" belt slide and one 2" D-ring on each tail of waist straps.
- 7) Using Figure B, install one 2-inch belt slide on each

shoulder strap.

8) Install one 2" belt slide with one 2" bent "D"-ring on right shoulder strap.

9) Weave the tail of the right shoulder-strap through the D-ring located on the waist-strap as shown. Then weave the webbing back through both 2" belt slides.

10) Weave the tail of the left shoulder-strap through the slot in the quick-release buckle on the left waist-strap. Then weave the webbing back through the 2" "belt-slide.

11) Using the right chest-strap assembly (with buckle), loop the webbing through right-side pivot D-ring and weave back through the plastic belt slide.

12) Using the left chest-strap assembly, loop webbing through the left-side pivot D-ring and pull tail through ring.

13) Weave tail of left chest-strap assembly through the slots in the quick-release buckle of the right-side chest-strap assembly.

14) Install the crotch strap components, as shown in Fig. "D".

15) Install the waist-strap release buckle on the same side of the waist-strap as the crotch-strap loop is installed.